



## **Water Quality Filter Maintenance Recommendations**

### When Used During Construction or Temporary Use

- Inspect the sediment basin and skimmer weekly and after each rainfall event of 1/2" or more
- As necessary, remove trash and debris from skimmer orifice opening
- Inspect the flexible coupling at riser monthly for wear or damage. Tighten pipe clamps as needed. If couplings are damaged contact manufacturer for replacements.
- Inspect the rigid pipe connecting the skimmer to the outlet structure monthly for cracks and to insure it is not covered in sediment or debris that would restrict the skimmer from floating.
- Inspect the Water Quality Filter for tears or openings

Note: The Rymar Water Quality Filter is not intended for use during construction as sediment loads are very high and will likely coat the filter and result in reduced flow/blinding. If it is used during construction, it will be important to inspect it often and clean debris/sediment from the filter on a regular basis to maintain flow to the skimmer.

### When Used as Part of the Permanent Post Construction Outlet Structure System

- Install the Water Quality Filter once site has been stabilized and per manufacturer recommendations. Detailed installation instructions are included with the Water Quality Filter.
- Installing the Water Quality Filter prior to site stabilization may lead to requiring replacement of the filter sooner than expected.
- Visually inspect the detention basin, skimmer and filter monthly and after each rainfall event of 1" or more
- As necessary, remove trash and debris from skimmer orifice opening and from around filter
- Inspect the flexible couplings at riser every six months for wear or damage. Tighten pipe clamps as needed. If couplings are damaged contact manufacturer for replacements.
- Inspect the rigid pipe connecting the skimmer to the outlet structure every six months for cracks and to insure it is not covered in sediment or debris that would restrict the skimmer from floating. Note that for permanent use it is recommend using UV-resistant PVC or HDPE pipe. If HDPE pipe is used, check for excessive bowing in pipe every 6 months
- Inspect maintenance rope and replace if worn or rotting.
- If debris/sediment is observed on filter, a broom can be used to remove debris.

---

**3620 Pelham Rd PMB #390 Greenville, SC 29615**

**855.697.9333**


**[www.rymarwaterworks.com](http://www.rymarwaterworks.com)**

**[info@rymarwaterworks.com](mailto:info@rymarwaterworks.com)**




- Vegetation may grow in the inner skirt material during spring and summer. Excessive vegetation can be removed in fall/winter when it dies or goes dormant using pruning shears. Be careful not to cut the filter.
- It is recommended to replace the Water Quality Filter every 24 months or if becomes torn. Contact Rymar Waterworks or your local distributor to obtain a replacement filter.

For technical information assistance, please contact Jamie McCutchen at [jamie@RymarWaterworks.com](mailto:jamie@RymarWaterworks.com)

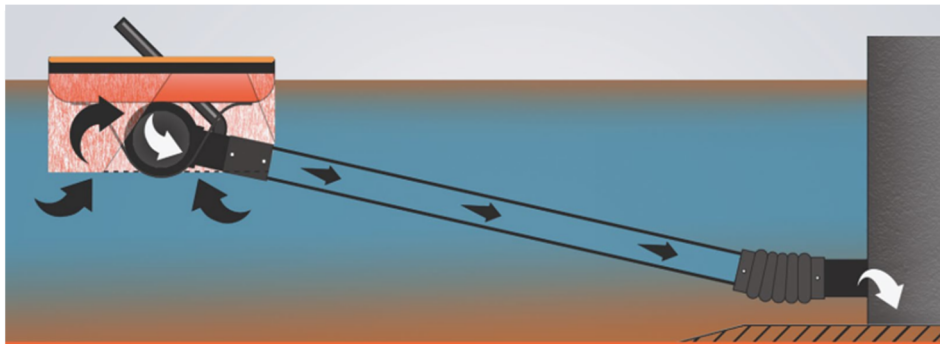

Marlee Float Skimmer

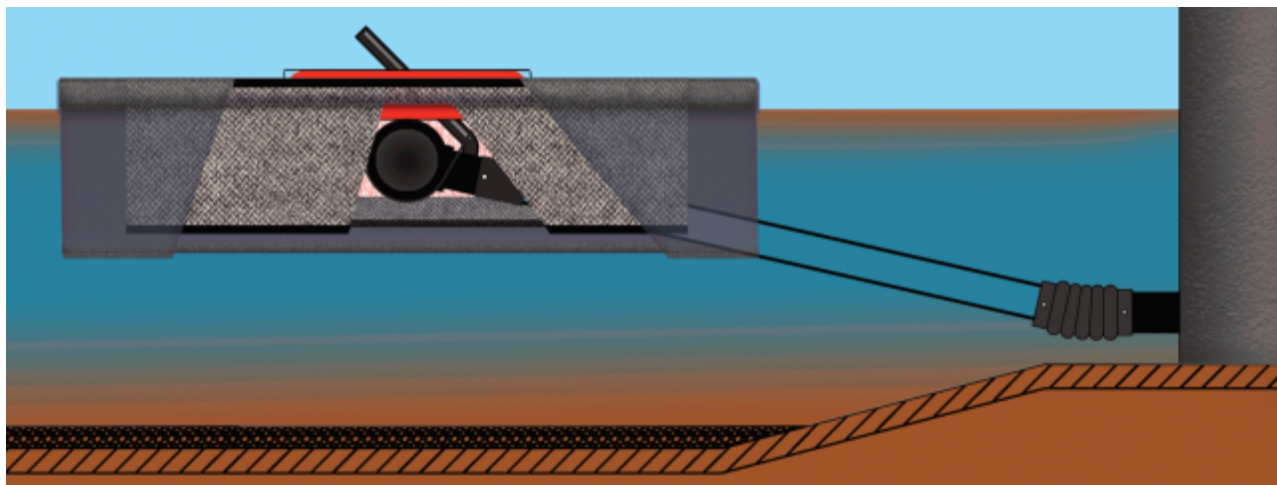

Marlee Float Skimmer with  
Water Quality Filter

---

3620 Pelham Rd PMB #390 Greenville, SC 29615

855.697.9333

[www.rymarwaterworks.com](http://www.rymarwaterworks.com)

[info@rymarwaterworks.com](mailto:info@rymarwaterworks.com)